

MAXDATA



MAXDATA FAVORIT XS Series

MAXDATA FAVORIT XS Series

User's Manual

Table of Contents

Introduction	5
Technical Specifications	6
Note	7
User note	7
Laser (service note)	7
Use	8
Environmentally sound PC system	8
Device Durability	8
Take Back Guarantee	8
Recyclable Device Construction	8
Material Requirements for Plastic Cases and Case Parts	9
Material Requirements for Printed Circuit Boards	9
Marking of Plastic Materials	9
Noise Emission	9
Batteries	9
Information on the return of electrical and electronic waste in EU countries	10
Energy Consumption	11
Definition of the MAXDATA warranty	12
MAXDATA warranty period	12
Scope of the MAXDATA warranty	12
Exclusions from the MAXDATA warranty	13
MAXDATA restriction to liability	14
Governing law	14
Data Backup	15
Wireless LAN	16
Additional safety notes for units with wireless LAN	17
CE-labelling for units with wireless LAN and Bluetooth	18
Restrictions	19
France	19
Italy	19
Netherlands	19
Radio frequencies for units with wireless LAN	20
Frequencies	20
Legal requirements - exception clauses	21
Before Getting Started	22
 Before Initial Operation	 23
Contents	23
Positioning the Computer	23
Temperature and humidity	23
Connecting the computer	23
Avoiding risk of stumbling	23
Data storage media	24
Avoid jarring	24
Allow for ventilation	24

The PC in Detail	25
Elements of the PC	25
Front Panel Components	25
The Rear View	26
Connecting the Monitor	27
Connecting Peripheral Devices.....	28
Connecting the Power Adapter and the Power Cable	29
Switching the PC On	30
Switching the System Off.....	31
The CMOS Battery	31
 Components of the PC	 33
The Optical Drive	33
The Card Reader (depending on the system configuration)	34
The Keyboard (optional)	35
 Troubleshooting	 39
 Index	 41

Introduction

Congratulations on your purchase of the MAXDATA personal computer! We are confident that it will meet your high expectations. This manual will familiarize you with your MAXDATA PC's components and features. We have taken all possible care to ensure that this manual contains correct, accurate information. However, we cannot assume liability for any possible errors. Please refer to your dealer for reporting errors or comments. We appreciate all feedback and are eager to incorporate any useful suggestions and improvements. All rights reserved. No part of this manual may be reproduced, processed or distributed in any form (print, photocopy, microfilm or any other process) or processed by an electronic system without prior written permission of MAXDATA. Other brand names may be registered trademarks and must be treated as such.

© Copyright 2007 MAXDATA Computer GmbH, Marl

Technical Specifications

Your PC requires alternating current at 50/60 Hz. To connect the device to the power supply, plug in the power cable. To disconnect it from the power supply, pull out the power cable. Utilize an easily accessible grounded outlet.

The input voltage is: 100 - 240 V~.

Operating environment:

Temperature : 10°C - 35°C

Humidity : 30% - 70% relative humidity
(non-condensing)

Dimensions:	Width / mm	Height / mm	Depth / mm
	226	42	172

Please refer to the box label for more detailed information on the system's specifications (motherboard, graphics, sound etc.).

Note

This device meets the EN 55022 and EN 61000-3-2 standards for interference emissions, the EN 55024 standard for interference, and the EN 60950 electrical safety standard. Any change made to this device without approval by the manufacturer voids any guarantee of meeting these standards. In order to assure EMC compliance (electromagnetic compatibility), please follow the corresponding guidelines in this manual.

User note

This device was carefully designed and tested to prevent radio interference. However, you should note the following for external data cables: If you need to replace any of the data cables specified by the manufacturer, be sure that the replacement cables have the same shielding specifications as the original cable to prevent interference. Always use shielded power lines and only use external devices that are CE certified.

No guarantee for meeting these standards can be maintained if you do not conform to the above guidelines.

Laser (service note)

Caution!

Laser radiation when the cover is open!

This laser radiation is contained in the CD drives. When dismantling and /or opening this drive, be careful:

- not to look into the beam, not even with optical instruments
- not to expose yourself to the beam
- to avoid eyes or skin being exposed to direct or scattered beam.

Failure to observe these guidelines can in the worst case lead to permanent blindness.

The built-in CD drives contain no user-serviceable or repairable parts. CD drives are to be repaired solely by the manufacturer. Laser products of laser classes 1 to 3B may be used in the product. When the housing is unopened the device meets the requirements of laser class 1. By opening the device, laser devices up to laser class 3B may be accessible. The built-in CD drives contain no user-serviceable or repairable parts. CD-ROM drives are to be repaired by authorized technicians.

Use

This product is not intended for medical, life saving or life sustaining usage.

Environmentally sound PC system

This system was constructed to be environmentally safe, which can be seen in its durability, enhancement possibilities and recyclability. For devices featuring the “Blue Angel” environmental label, details regarding disposal, recycling, power consumption and noise emissions can be found in the accompanying supplement.

Device Durability

This PC is a modular system. The components used can be easily exchanged or removed. The devices have been built in such a way that the following enhancements are always possible:

- Processor upgrade
- Adding or replacing memory modules
- Replacing the mass storage

Please consult the enclosed warranty documentation for the warranty conditions.

Take Back Guarantee

We offer a take back guarantee for all our products, if the device shows signs of normal use. Returned devices are re-used or scrapped in an environmentally safe way. You can return your device to your local dealer.

Recyclable Device Construction

This device conforms with the principals of VDI guideline 2243 on “Construction of recyclable technical products”. This guideline in detail embodies:

- Avoid non detachable connections (e.g. gluing or welding) between different materials.
- Mechanical connections must be easily detachable;
- Avoid covered parts or composite materials;
- The device must be easily dismantlable, also for a simple repair;
- Reduction of the use of multiple materials.
- Reduction of the use of multiple plastics for case parts
- Nearly all plastic case parts are made from the same, recyclable material.

Material Requirements for Plastic Cases and Case Parts

- All plastics used for the case are manufactured without the use of dioxins and furans.
- An independent testing laboratory in Germany has tested and approved the characteristics of the plastics used.

Material Requirements for Printed Circuit Boards

- All our suppliers have ensured us that their circuit boards do not contain PCB (polybromite biphenyl), PBDE (polybromite diphenylether) or chlorinated paraffin.

Marking of Plastic Materials

- All plastic parts of this device are marked in accordance with ISO 11469. This ensures a problem free separation of the different materials when recycling.

Noise Emission

This PC meets the requirements for noise emissions according to EN 27779 and falls below the following values:

Operation mode	Sound power level LW (dB(A)) (according to ISO 9296))
Idle	< 48
Drive operation	< 55

Batteries

This device does not contain batteries containing heavy metals. The lithium batteries used have an extremely long life span (> 10 years). Please consult the notes in the manual concerning servicing, replacement or disposal of the battery.

Information on the return of electrical and electronic waste in EU countries according to Directive 2002/96/EC, and its implementation in respective national regulations

a) Reason and Purpose of Separate Collection

Users of electrical and electronic equipment are required to dispose of used devices separately. Electrical and electronic equipment must not be disposed of together with unsorted municipal solid waste (domestic refuse), as it contains a range of dangerous elements that cause problems for waste management. Separate collection from regular municipal waste is a prerequisite for the special treatment and appropriate recycling of electrical and electronic waste. This is essential, as many components of electrical and electronic devices are damaging to the environment if they are not disposed of professionally. Disposing of the devices along with unsorted municipal waste can cause harmful substances to enter the waste flow. The consequence would be a considerable burden on the environment.

b) Significance the 'Crossed-Out Wheelie Bin'



The crossed-out wheelie bin is the symbol for separate collection.

Electrical and electronic equipment marked with this symbol must not be disposed of together with municipal sorted waste (domestic refuse). Such items can be handed in free of charge at public collection points.

c) Reuse, Recycling and Recovery

Electrical and electronic waste contains valuable raw materials such as iron, aluminum and copper. These components must be treated selectively. A separate collection and a selective treatment are the basis for environmentally-friendly disposal and protection of human health.

According to the particular terms, manufacturers are obligated to assume the costs associated with disposing of these devices as well as other obligations. This is to promote the chief objectives of reuse and recycling. For this to be possible, consumers must dispose of used devices that are no longer needed at communal collection points. Actively using these return and collection systems contributes to the reuse, recycling and recovery of electrical and electronic equipment and protects the environment.

d) Weight

Information on the weight of the acquired product can be found on the item list as well as on the packaging.

Energy Consumption

Our workplace computers are specially designed to save energy. The power consumption listed on the label refers to the maximum possible power consumption, that is, if the computer is fully expanded and receiving 100% of the allowed output from the power supply. The devices can be disconnected from an external power source for at least 4 weeks without losing any functionality.

You can specify the individual time settings for the energy-saving mode in the BIOS setup. The only way to prevent any energy consumption at all is to disconnect the workstation from the power supply (by disconnecting the main plug).

Definition of the MAXDATA warranty

The MAXDATA warranty covers all failures resulting from defective components and manufacturing defects that occur within the product specific warranty period. The warranty period begins on the date of purchase (date of original customer invoice).

Please be aware that in order to maintain your warranty claim the product concerned has to be received by MAXDATA together with the serial number and a copy of the original customer invoice within the warranty period.

MAXDATA's obligation under the warranty is restricted to repairing or exchanging defective components.

Defective components removed during repair process become the property of MAXDATA. Components replaced within warranty coverage assume the remaining valid warranty period of the system.

MAXDATA warranty period

The standard warranty period for all MAXDATA products is 3 years, except for the notebooks of the ECO and M-BOOK series, for which the standard warranty period is 2 years. The type of standard warranty varies with the product and can be seen in detail in the description of warranty types and the warranty summary. It is possible to extend the standard warranty to include additional service packages.

Scope of the MAXDATA warranty

Scope of warranty for Belinea monitors

MAXDATA's obligation under the warranty is limited to failures resulting from defective components and manufacturing defects, defects in the CRT, panel and background lighting for electrical errors (please also refer to the term definition and liability restriction).

Scope of the warranty for MAXDATA Notebooks/PCs/FUSION Workstations/Thin Clients/PLATINUM Servers

MAXDATA's obligation under the warranty is restricted to MAXDATA's choice of either the repair or replacement by similar or better components of parts determined to be defective.

Scope of warranty for peripheral devices

MAXDATA has no warranty obligation for these products; instead there are product-specific manufacturer warranties. The terms of these manufacturer warranties are at least 12 months, starting from the time MAXDATA delivers them to the specialist reseller. The manufacturer guarantees the presence of the features described in the product documentation and that the materials and processing will be free of defects for the stated period.

Scope of warranty for spare parts

MAXDATA has no warranty obligation for these products, but product-specific warranty obligations of the manufacturer. The terms of these manufacturer warranties can be asked for at the manufacturer concerned.

Exclusions from the MAXDATA warranty

The MAXDATA warranty does not cover damage of any kind that results from:

- The use of peripheral devices
- Improper use/operating faults
- Non-adherence to the user instructions
- Attempted repairs by the customer or third-parties without authorisation by MAXDATA
- Defective maintenance by third parties
- Device defects due to power failure, heat losses, missing EMC (electro-magnetic compatibility) cabling or similar reasons
- Accidents, storms, lightening, fire, water/other liquids, other natural catastrophes, theft, riots, plundering, the effects of war or other instances of acts of god
- The use of third-party components
- Non-authorised system changes
- BIOS versions/firmware updates/programmes to remove defects of all kinds (e.g. service packs, bug-fixes, hot-fixes)
- Resetting safety functions, deletion of passwords etc.
- Loss of customer-specific data or software from repair and installation processes
- Improper use of machine capacity or output
- Inappropriate customer operating environment

The MAXDATA warranty also does not cover the following:

- MAXDATA products from which the category plates, serial numbers, part numbers on the machine or machine parts have been removed or changed
- Decline in rechargeable battery capacity after the end of the 6 month warranty period
- The provision and installation of BIOS, driver or software updates/upgrades
- The new installation of software/operating systems that are no longer able to run (e.g. because of the deletion of system-relevant files, incorrect system settings or self-copying programs, e.g. computer viruses)
- Wear and tear on data storage media, LCD background lighting, CRTs on CRT monitors, picture tube burn-in or loss of brightness

-
- MAXDATA products for which the warranty seal has been broken by entities other than MAXDATA or those authorised by MAXDATA
 - Breaks and scratches on TFT panels and CRT displays
 - Damage through use of force and external impact respectively
 - Spots on the panel caused by external impacts
 - Colour spots resulting from falls
 - Error class 2 pixel errors (please note the information on ISO 13406-2 on the website of the MAXDATA subsidiary concerned).

If the device received by MAXDATA demonstrates two defects and only one of these is covered by the MAXDATA warranty claim, the customer only has the right to repair for the damage to his device covered by the warranty.

In this case MAXDATA reserves the right to offer the customer several options on resolution in the form of a quotation and to charge the relevant processing costs.

This also applies to those devices for which upon receipt, it is found that they are not covered by the warranty. In these cases, MAXDATA reserves ownership of the exchange device provided and is entitled to demand its return.

MAXDATA reserves the right to charge costs incurred for unsuccessful attempts to collect a device that has been registered as defective from the customer.

If an exchange device is not provided in spite of a period having been set, MAXDATA is entitled to charge the net sales price as per the current price list plus the processing costs incurred. The customer has the right to provide evidence for the existence of lower damages.

MAXDATA restriction to liability

MAXDATA expressly excludes customer claims that go beyond the warranty conditions if there is no obligation of liability imposed on MAXDATA by the laws of the country where the device was bought. This also applies in particular with regard to claims for damages as a result of default, damages for claims arising as a result of defects, loss of profit, transport damage that was not registered within a period of 6 days after receipt of the goods, loss of data or information through repair processes or damage resulting from interruption to operations.

Governing law

All rights and duties are subject to the law of the country in which the MAXDATA product was purchased. The Agreement on Contracts for the International Sale of Goods (CISG) is not applicable.

Data Backup

The responsibility for complete data backups, including of applications and operating system software remains exclusively with the customer. The data must be backed up before the warranty claim is made. MAXDATA excludes liability for any data or information lost for this reason during a warranty claim.

For further details regarding the MAXDATA warranty conditions please refer to www.maxdata.co.uk.

Wireless LAN

(wireless network - abbreviation = WLAN)

Your PC may contain a wireless LAN module (optional). This module allows you to set up a wireless-based network, and to connect to an existing wireless network. It works according to the IEEE802.11a+b+g standard.

WLAN technology allows users to set up wireless connections inside a local area (e.g. in a company or campus building, or in a public building such as an airport). WLANs can be used in temporary offices, in locations where it is not possible to set up extensive cable installations, or to extend an existing LAN so that users in different parts of a building can work at different times.

There are two different ways to operate a WLAN. In fixed WLANs, wireless stations (devices with radio network cards or external modems) set up connections with wireless access points, which act as bridges between the stations and the existing network backbone. In Peer-to-Peer (ad hoc) WLANs several users can set up a temporary network within a limited area such as a conference room, without using access points, and providing there is no need to use network resources.

In 1997 the IEEE confirmed the standard 802.11 for WLANs; this set a data transfer rate of from 1 to 2 Mbit/s (Megabits per second). Under 802.11a+b+g, the new governing standard, the maximum data transfer rate is 54 Mbit/s over a frequency band of 2.4 or 5 GHz (Gigahertz).

Additional safety notes for units with wireless LAN



If a wireless LAN module is integrated in your PC, it is essential that you observe the following safety information when using your PC:

- Switch off the PC when you are in an aircraft or while driving a car.
- If you are in a hospital, an operating room or close to an electronic medical system, switch off the wireless components in the PC! The radio waves which are transmitted could disrupt the working of the medical equipment.
- Keep the PC at least 20 cm away from a heart pacemaker, otherwise there is a risk that the radio waves could disrupt the normal working of the pacemaker.
- The radio waves which are transmitted could give rise to interference noise in hearing aids.
- When its radio components are switched on, do not place the PC close to inflammable gases or in an environment which could be at risk of explosion (e.g. paint shop), since the radio waves which are transmitted could set off a fire or an explosion.
- The range of the wireless connection depends on the environmental and other ambient conditions.
- When transferring data over a wireless connection, unauthorized Third Parties can also receive the data.

MAXDATA Computer GmbH is not responsible for disruptions to radio or television reception which are caused by unauthorized alterations to this unit. MAXDATA also accepts no responsibility for the replacement or the exchange of connecting cables and units which were not specified by MAXDATA Computer GmbH. The user alone is responsible for the elimination of disruptions caused by this type of unauthorized alteration; he is also responsible for the replacement or the exchange of the units.

CE-labelling for units with wireless LAN and Bluetooth



As delivered, this device complies with the requirements of the Guideline 1999/5/EG of the European Parliament and of the Council dated the 9. March 1999 concerning radio equipment and telecommunications facilities, and the mutual recognition of conformity.

This PC may be used in Belgium, Denmark, Germany, Finland, France, Greece, Great Britain, Ireland, Italy, Luxembourg, the Netherlands, Austria, Portugal, Sweden, Switzerland, Spain, Iceland, Liechtenstein and Norway.

Current information on any possible restrictions in its operation can be obtained from the appropriate authorities in each country. If your country is not included in the above list, then please contact the appropriate supervising authority, in order to check whether the use of this product is permitted in your country.

Belgium - www.bipt.be

Denmark - www.tst.dk

Germany - www.regtp.de

Finland - www.ficora.fi

France - www.art-telecom.fr

Greece - www.eett.gr

England - www.oftel.gov.uk

Ireland - www.comreg.ie

Italy - www.agcom.it

Luxembourg - www.etat.lu/ILT

Netherlands - www.opta.nl

Austria - www.rtr.at

Portugal - www.urt.gov.pt

Sweden - www.pts.se

Switzerland - www.bakom.ch

Spain - www.cmt.es

Iceland - www.pta.is

Liechtenstein - www.ak.li

Norway - www.npt.no

Restrictions

France

Restricted frequency range: In France, you may only use channels 10 to 11 (2457 MHz or 2462 MHz). It is forbidden to use the unit outside of enclosed areas.

Info: www.art-telecom.fr

Italy

An official authorization is also required to use the unit in internal areas. For more detailed information about the necessary procedure to do this, please contact your provider. It is forbidden to use the unit outside of enclosed areas.

Info: www.agcom.it

Netherlands

A licence is required to use the unit in the open. For more detailed information about the procedure to be followed for this, please contact your provider.

Info: www.opta.nl

Radio frequencies for units with wireless LAN

The following information was correct at January 2002. You can obtain current information from the appropriate authorities in your country (e.g. www.regtp.de).

Frequencies

Radio network cards and adapters are designed in accordance with IEEE-Standard 802.11b+g for use in the ISM frequency band (Industrial, Scientific, Medical) between 2.4 and 2.4835 GHz. Because of the DSSS-procedure (Direct Sequence Spread Spectrum), each of the 11 usable radio channels takes up a width of 22 MHz; this means that up to three, independent channels are available (e.g. 3, 8 and 11). The following table lists the authorised channels in your country:

Channel	MHz	Europe, R&TTE	France, R&TTE
1	2412	X	
2	2417	X	
3	2422	X	
4	2427	X	
5	2432	X	
6	2437	X	
7	2442	X	
8	2447	X	
9	2452	X	
10	2457	X	X
11	2462	X	X

In addition, the integrated radio network card supports the standard 802.11a. For more information regarding 5 GHz band frequencies authorized in your country, please contact your respective appropriate authority.





Legal requirements - exception clauses

Exception Clauses For Units With Wireless LAN

The installation and use of an unit with Wireless LAN may only take place when in accordance with the instructions contained in the user documents. The user documents are included in the material supplied with the product. All alterations or modifications made to this unit which are not expressly authorised by the manufacturer may lead to cancellation of the right of the user to operate the unit. The manufacturer is not liable for radio disruptions during the reception of radio and television signals which are due to non-authorised alterations to the unit or to the exchange or connection of cables and accessories, where these are not in accordance with the recommendations of the manufacturer. It is the responsibility of the user to remove any interference which may arise as a result of any non-authorised alterations, or the addition or replacement of components. Neither the manufacturer nor his authorised dealer and wholesaler are liable for damages or breaches of legal regulations which result from an infringement of these guidelines.

Before Getting Started

This manual uses some symbols to facilitate the user's orientation and to highlight points of importance.

Degree of danger	Damage to persons	Damage to property	Use with:
	×		Immediate threat of danger; possible consequences: death or life-threatening injury.
		×	Potentially dangerous situation; possible consequences: light or moderate injury.
		×	Potentially harmful situation; possible consequences: the product or anything nearby may be damaged.
			Useful information and recommendations that may make using your system easier.

Before Initial Operation

Contents

Before you begin the installation of your PC, make sure that you have all the parts. If anything is missing from the listed and illustrated packing list, please contact your dealer immediately.

- System unit
- Keyboard (optional)
- Mouse (optional)
- Power cable and power adapter
- Operating system
- Software
- Users's manual/Quick start guide (optional)
- DVI VGA adapter (optional)

Depending on your system model, your PC may be different than the ones shown in this manual. When the differences are significant, the various options will be shown.

Positioning the Computer

Please take note of the following criteria for creating a practical and safe workplace when setting up your computer:

Temperature and humidity

The computer can be used anywhere the temperature is suitable for people. However, rooms with humidity over 70%, and dusty or dirty areas are not appropriate. In addition, do not expose the PC to temperatures over +35°C or under +10°C.

Make sure that you avoid temperature changes that could lead to condensation. If moisture has accumulated on the surface of your computer, wait until the moisture has dried completely (approximately one to two hours), before you switch the device on.

The operational reliability of a device that has been exposed to condensation cannot be guaranteed.

Connecting the computer

Make sure that the cables connecting the PC to peripheral devices are not under tension.

Avoiding risk of stumbling

Make sure that all power and connection cables are positioned so that they are not trip hazards.

Data storage media

When you save data to your PC's hard disk or to a floppy disk, it is stored as magnetic information on the medium. Make sure that data is not damaged by magnetic or electro-magnetic fields.

Avoid jarring

Because the electronics in your computer can be damaged by jarring, no mechanical devices should be placed on the same surface as the PC. This is especially important for impact printers whose vibrations could damage the hard disk.

Allow for ventilation

There is a fan on the back of the PC that maintains the proper temperature inside the case. In order for it to function properly, the ventilation slots must not be blocked. Blocking them would cause the inner components to be damaged by high temperatures. That is why it is not appropriate to install the PC in a shelf unit or drawer.


The PC in Detail

Elements of the PC

All components necessary to operate your PC system are located on the front panel.

Front Panel Components

1. Eject button for optical media.
2. Card reader (depending on the system configuration for 3 or 4 different kinds of memory cards).
3. Front USB port. USB peripheral devices can be connected here.
4. Optical drive (depending on the system configuration, e.g., DVD+/-RW or CD-RW).
5. On/Off button with power LED. This button has several functions:
 - a. Pressing this button switches the computer on.
 - b. If you briefly press the button while the computer is switched on, current operating systems will shut the computer down.
 - c. Pressing the button for longer than four seconds switches the computer off.

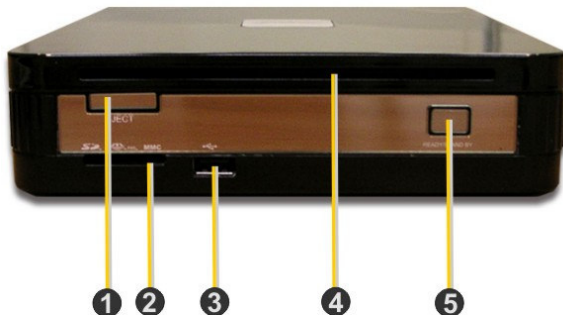


All data that has not been saved will be lost.



The behaviour of the on/off button and the power LED depends on the BIOS settings and the operating system.

The Rear View

The ports on the rear side of the workstation can vary slightly depending on the system configuration. Because of the wide product range, the usual ports are shown here.

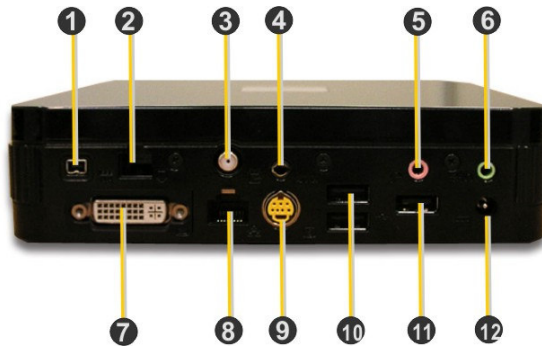

1. IEEE 1394. Depending on the system configuration, the IEEE 1394 can be used as a high-speed I/O port for transferring data in real time (e.g., from a digital camera).
2. Modem port. Depending on the configuration, the system may include a built-in 56K modem that can be connected to the telephone network using this port.
3. TV-IN. Depending on the system configuration, a TV antenna can be attached in order to receive television signals.
4. AV-IN. Depending on the system configuration, this connection can be used for the transferral of audio and video signals.
5. Microphone socket.
6. Loudspeaker/headphones socket.
7. DVI-I port. This 'Digital Video Interactive Integrated' connector can be used to attach a monitor.
8. Network connection socket. Depending on the system configuration, the integrated network component allows the computer to be connected to a network or to DSL/Internet. The connection is established via an Ethernet network cable equipped with RJ45 plugs.
9. TV port (S-Video). Depending on the system configuration, S-Video-capable devices can be connected using this port (e.g., a television).
- 10./11. USB ports. USB peripherals (e.g., mouse devices, printers, scanners or digital cameras) can be connected here.
12. Power adapter socket. This is where the power cable is connected to the power adapter.

Connecting the Monitor




Carefully insert the connection cable into the suitable port to avoid damaging the plug or socket.



If the monitor is not able to process the frequencies from the graphics card, it could be destroyed!

Any monitor which complies with the VGA graphics standard can be connected to your workstation. The monitor connector is located on the rear side of your PC.

If you use an old monitor, make sure to compare the technical details of the monitor with the integrated graphics component.

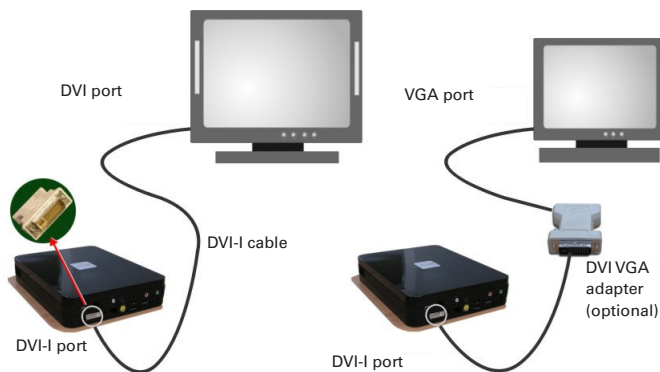

The computer and the monitor must be switched off when being connected, as otherwise the hardware may be damaged.

Connecting Peripheral Devices

On the rear side of the computer you will find the USB port for connecting a USB keyboard, mouse or other USB peripherals (e.g., printers, scanners or digital cameras). Just plug the device into a free USB port.



Please make sure to read the manual before attempting to connect the printer. For example, you may first need to install the drivers. Note that before you use the printer for the first time, you must remove the transport protection and insert the ink or toner cartridge. Consult the printer manual for further information. Often you must also install the appropriate printer driver. You can find the necessary information in the printer manual.

Connecting the Power Adapter and the Power Cable

The PC has a power adapter which can be operated with 100–240 V AC. Connect the power adapter using the attached cable with the appropriate socket on the PC. Then plug one end of the power cable into the external power adapter socket and the other end into an appropriate earthed wall outlet.



The external power adapter as well as the power cable are specially designed to suit the FAVORIT PC. Please do not use any other accessories as they could damage the system.



The power adapter contains no serviceable parts. Never open the power adapter – risk to life!

You could receive a deadly electric shock.



Switching the PC On

Before starting the computer, you should switch on the monitor, printer, modem etc. This ensures that the operating system recognizes the connected devices and integrates them accordingly.



Turn on your PC by briefly pressing the ON/OFF button on the front. The PC carries out an internal self-test. If errors are detected during this test, these are displayed on the screen if possible. After successful completion of the PC self-test, the operating system (if installed) is started.

Switching the System Off

The switch off procedure of the system depends on its operating system.

Some operating systems shut down the PC completely and switch it off.

If your OS does not support this function, please press and hold the ON/OFF switch for longer than 4 seconds in order to switch the system off. In case you are not going to use the system for an extended period, please unplug the power cable at the back of your system.

The CMOS Battery




When changing the battery it must not be allowed to short circuit or be inserted with reversed polarity. A battery which is inserted with reversed polarity may explode or cause damage to the electronics on the motherboard.

Only use the battery type recommended by the manufacturer. You can purchase new batteries from your dealer.

There is a special type of memory on the motherboard of your PC which must not be erased, in contrast to the normal RAM. This memory is called CMOS RAM. It stores the internal configuration settings of BIOS, as well as important parameters for the system clock and calendar. In order to maintain the contents of CMOS RAM even when the PC is turned off, it is constantly supplied power from a battery.

To change the battery, please use the following instructions and take note that this procedure can differ depending on the mainboard of the PC:

1. Slide the safety latch to the side.
2. Lift and pull the battery from the holder.
3. Insert the new battery.
4. Lock the battery in place.

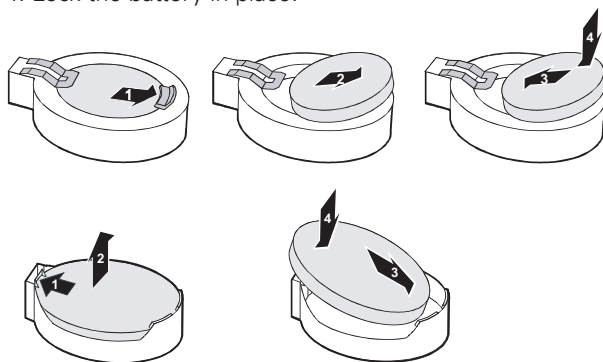

Don't dispose of batteries in a fire – they may explode.

Batteries and rechargeable batteries do not belong in the household garbage.

They are accepted free of charge by manufacturers, dealers or their representatives for recycling or disposal.

Components of the PC

The Optical Drive

Depending on the system configuration, your PC may be equipped with an optical drive (e.g., a CD-ROM, DVD+/-RW or combination drive).



While the computer is running, insert the optical medium (CD or DVD) into the drive with the label facing upwards, as shown in the figure.

If you would like to take out the disk, push the optical drive eject button (see figure) while the computer is running. The disk will be automatically ejected.



Only insert one disk at a time into the drive. Do not insert any objects into the drive other than the appropriate optical media.




The built-in CD-ROM drive is a class 1 laser product. Do not open the device and do not look into the laser beam, even when using optical instruments.

The Card Reader (depending on the system configuration)

When you put the memory card (e.g., MMC or SD cards) into the reading device, please make sure that the copper 'teeth' on the card are facing downwards. To remove the card, simply pull it out of the slot.




The Keyboard (optional)

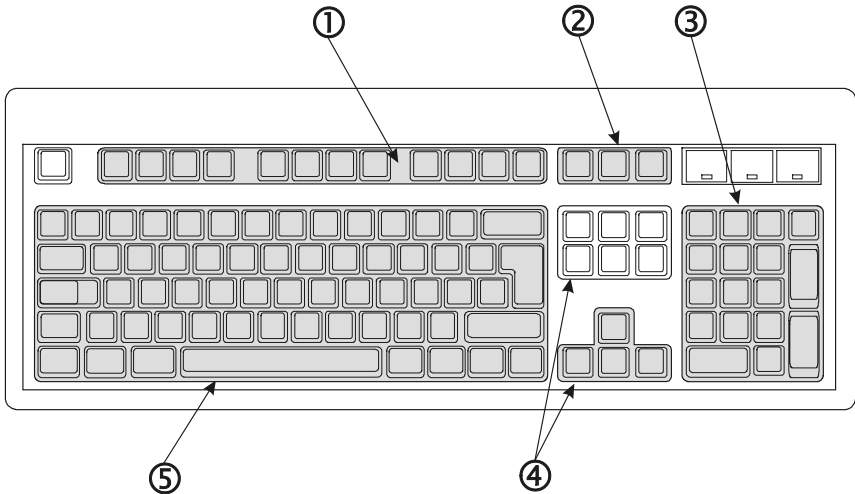

The keyboard is divided up into 5 logical units:

1. Function keys

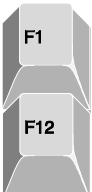

The 12 function keys are labeled F1 through F12. The function keys have various functions depending on the software application. The function keys can also be used in combination with the <Shift>, <Ctrl> or <Alt> keys.

2. Separate control keys



With the <Print Screen> key, the current screen content will be copied into the clipboard. The screen content can be copied into any application. When used in combination with the <Alt> key, only the active window will be copied.



The <Scroll Lock> key changes the way the cursor and the <Page Up> and <Page Down> keys function.



The <Pause> key is used to interrupt the screen data feed in a DOS environment. For some games this key is also used to pause play.

3. The numeric keypad and cursor block



The <NumLock> key (top left) is used to toggle between the two functions imprinted on the keys. If the <NumLock> LED is illuminated, the numbers are activated; else the secondary function (Cursor, Home, Page Up etc.) is active.

4. The control keys



The <Insert> key is used to toggle between the overwrite and insert modes.



When the <Delete> key is pressed, any highlighted character or one character to the right of the beam cursor will be deleted.




Use the <Home> key to move the cursor to the beginning of a line.



The <End> key has the opposite function of the <Home> key and positions the cursor at the end of a line.




Use the <Page Up> key to scroll back through text by one monitor screen in a word processing tool; use the <Page Down> key to scroll forward through the text.

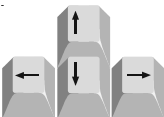

Use the arrow keys to move the cursor in the respective direction.

5. The typewriter keys

The typewriter keys consist of keys with numeric, alphanumeric and special characters. They are arranged like the keys on a standard typewriter.

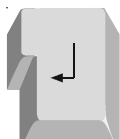

The <Enter> key is labeled with an angled arrow pointing to the left. It is used to confirm predefined or manually entered commands.



Use the <Shift> key in order to write capital letters or to produce the symbols printed above the keys (!"§ etc.).



Press the <Caps Lock> key once to enter all characters as capitals. When this function is activated, the corresponding LED will light up. Pressing this button again will deactivate this function.




The <Backspace> key erases a single character to the left of the cursor.



Press <Space> to enter a blank space.



The <Alt> and <Ctrl> keys are used in combination with other keys in order to execute shortcuts. For example, when using a Microsoft® Windows® operating system, the key combination [Ctrl]+[Alt]+[Del] will launch the task manager.

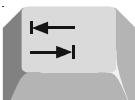

In most word processing applications, the <Tab> key will move the cursor a certain distance to the right or, when the <Shift> key is held down, to the left.



Press the special Microsoft® Windows® key to open the Start menu.



Use the <Application> key to display a pop-up menu of the currently selected application. Pressing the <Application> key is the same as clicking the right mouse button in some applications.

Troubleshooting

In the following section you will find solutions for different kinds of problems. Please check the following list before you call technical support.

Screen is blank.

- Make sure your PC is not in standby mode – press any key to wake up.
- Make sure the monitor power switch is in the ON position.
- Make sure the power cable is connected to a live outlet.
- Check the contrast and brightness settings on your monitor.

The PC worked perfectly until new software was installed.

- Use a virus scanner to see if your PC is infected.
- Check the “readme” files for software incompatibility.

Some keys do not work correctly.

- You have probably installed the wrong (or no) keyboard driver. Restart your operating system and make sure that the correct keyboard driver is indicated.

The printer won't print.

- Make sure that the cable between the PC and printer is correctly connected.
- Make sure that your printer is online (see your printer manual).

The mouse is correctly connected, but isn't responding.

- Make sure that the mouse is correctly configured in your software. Refer to your mouse documentation.

If none of these suggestions help to fix the problem, please have the device repaired at your certified service partner.

Please refrain from attempting to repair the device on your own.

Index

A		
Alt	35, 37	
AV-IN	26	
B		
Battery	9, 31	
BIOS	13, 31	
Button	30	
C		
CD-ROM	7	
CMOS	31	
Components	5, 8, 12, 13, 24, 25	
Connecting	28	
Ctrl	35, 37	
D		
Data storage media	13, 24	
Dimensions	6	
Disk	24	
DOS	35	
E		
Energy Consumption	11	
Environment	8, 17	
F		
Function keys	35	
G		
Guarantee	7, 8	
H		
Hard disk	24	
Humidity	6, 23	
I		
IEEE 1394	26	
Input voltage	6	
J		
Jarring	24	
K		
Key	35, 36, 37	
Keyboard	23, 35, 39	
Keypad	36	
L		
Laser	7	
LED	36, 37	
Liability	5, 12, 14, 15	
Loudspeaker/headphones socket	26	
M		
Memory	31	
Microphone socket	26	
Modem	16, 30	
Modem port	26	
Monitor	12, 27, 30, 39	
Mouse	23, 37, 39	
N		
Network	16	
Network connection socket	26	
Numeric	36, 37	
O		
Operating system	13, 15, 23, 30, 31	
P		
Parallel	26	
Peripheral	12, 13, 23, 28	
Ports	26	
Power adapter	29	
Power adapter socket	26	
Power cable	23, 39	
Printer	30, 39	

R

Radio.....	16, 17, 18, 20, 21
RAM	31
Repair	7, 12, 13, 14

S

Screen	30, 35, 36
Self-test	30
Software	13, 15, 23, 35, 39
Sound	6
Standards	7
Switch.....	31, 39
Symbol.....	22

T

Temperature	6, 23, 24
Test	9, 30
Transport.....	14
TV-IN	26
TV port.....	26

U

USB ports	26
-----------------	----

V

VGA.....	27
----------	----

W

Warranty	12, 13, 14, 15
Wireless LAN	16, 17, 20, 21
WLAN	16

Austria**MAXDATA Computer GmbH**

Ignaz-Köck-Straße 9
A-1210 Wien
Phone: +43 1 (0) 27789-0

Benelux**MAXDATA Benelux B.V.**

Bredaseweg 113-115
NL-4872 LA Etten-Leur
Phone: +31 (0) 76 5039250

France**MAXDATA S.A.R.L.**

7 avenue du Général de Gaulle,
Bâtiment 4,
F-91090 Lisses
Phone: +33 (0) 169 112990

Germany**MAXDATA Computer GmbH**

Elbestraße 12-16
D-45768 Marl
Phone: +49 (0) 2365 952-0

Italy**MAXDATA Italia S.r.l.**

Strada 1, Palazzo F1
I-20090 Milanofiori, Assago (MI)
Phone: +39 (0) 2 5777-91

Poland**MAXDATA Sp. z o.o**

Ursynów Business Park
ul. Puławska 303
PL-02-785 Warszawa
Phone: +48 (0) 22 5435800

Spain · Portugal**MAXDATA Iberia s.l.**

c/Colquide, 6
Edificio Prisma – Portal 1-B-Pta. 1a
E-28230 Las Rozas (Madrid)
Phone: +34 (0) 91 6375655

Switzerland**MAXDATA Computer AG**

Haldenstrasse 5
CH-6340 Baar
Phone: +41 (0) 41 766 32 32

United Kingdom**MAXDATA UK Limited**

The MAXDATA Centre, Downmill Road
Bracknell, Berkshire, RG12 1QS, UK
Phone: +44 (0) 1344 788900

MAXDATA
INDIVIDUAL TECHNOLOGY